

- New Supply/Return Piping feature allows specification of distribution piping for manifolds.
- New Main Menu design with web-enabled features.
- New Check for Updates feature will automatically notify you when an update is available for download.
- Updated to Manual J Eighth Edition Version 2.5 calculations (MJ8 Edition only).
- New Mirror Drawing function allows flipping of entire floor plan drawing along any axis.
- New Move floor plan function.
- New Multiple Tube Spacing option now available in Quick Design Mode projects.
- Added options to show Floor Covering type, Room Volume and Perimeter on Custom Tables (Rooms table).
- And here were some additions:
- New Quick Design Mode allows you to complete your design without drawing the detailed circuit layout. Reduces your design and quotation time by 50% or more, and lets you add the detailed circuits later if needed.
- New Auto-Rotate feature for building orientation. Finds the maximum cooling load orientation automatically.
- New Thermostat objects that can be added to your drawings (optional).
- New Copy Table feature allows you to copy tables to clipboard and paste them into other programs.

